Instructions

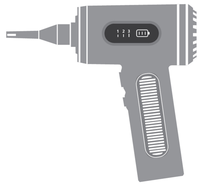

Air duster

⚠ WARNING

Please read this manual carefully before using this product and keep it for future reference.

- Do not place in high temperature or humidity.
- It is forbidden to modify, disassemble, crush, or throw into fire.
- Do not continue to use if there is an abnormality.
- It is strictly forbidden to use unlicensed or incompatible adapters and charging cables to charge the product, which may cause malfunction and danger.
- If you do not use this product for a long time, please store the product in a cool and dry environment, in order to ensure the service life of the product battery, please fully charge and discharge the product at least once every 3 months.
- This product is not intended for use by children or persons with physical, sensory, or mental impairments.

❗ NOTE

- Long press the power on button screen battery icon " " flashing, the air duster collector cannot be started, it is the battery power is insufficient, please charge it in time.
- Please use the charging cable supplied by this machine to charge the product, or use a mobile phone adapter with safety certification of 5V/2A and above and the standard charging cable to charge the product, and it is forbidden to purchase an adapter to charge the product without permission.
- As the number of times the product is used increases, the compressed air duster may decay in terms of its useful life.
- After use, please keep the product in a cool, dry, away from high temperature, high humidity and high dust environment.
- Due to the built-in high-rate lithium battery, it is strictly forbidden to disassemble the product in case of abnormal noise or other suspected quality problems.
- Do not wash this product with water, otherwise it will damage the motor and cause permanent damage to the product, and the product quality problems caused by this behavior are not covered by the product warranty.
- After use, please keep out of reach of children, children are strictly prohibited from operating without permission.
- This product is not suitable for use in high magnetic field environment.

PRODUCT INTRODUCTION

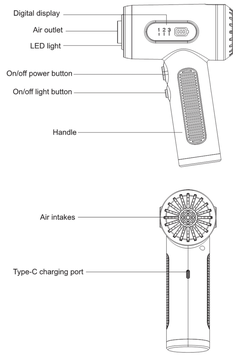

ACCESSORIES

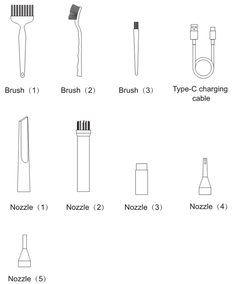

Dusting off/Blowing: Select the corresponding accessories according to the usage scenario.

ACCESSORIES INSTALLATION AND USE

Nozzle(1):Clean up the dust in OA equipment or narrowspaces wheretools can not reach out.
Nozzle(2):It can clean up the dust of keyboards, computer cases, motherboards, etc.
Nozzle(3):For PVC swimming pools and inflatable beds, etc.
Nozzle(4):For swimming ring/beach ball/yoga ball inflation; Airblowing on barbecue charcoal.
Nozzle(5):For camera lens/jewelry/phone handset charging portand other items.
Brush/ Suction nozzle combination:Used to vacuum dust, debris or hair, vacuum static electricity or thick dust adhesions.

⚠ **Note: Turn off the machine before replacing the accessory.**

Blow mode:

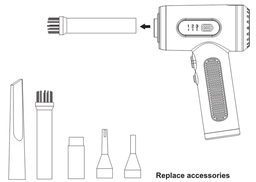

Replace accessories

PRODUCT PARAMETERS

Wind velocity	First gear about: 8.6m/s Second gear about: 10.4m/s Three gear about: 12.5m/s
Endurance time	First gear : 37±2min Second gear : 25±2min Three gear : 18±2min
Rotate speed	50000RPM
Noises	≤85dB
Charging time	About 4H
Rated power	68W
Output	11.1V
Input	DC 5V/2A
Battery specification	2000mA*3
Material	ABS+Spray paint
Product size	123*174*60mm
Product weight	381g

CHARGING METHOD

During use, the battery level gradually decreases as the time of use increases, and the current power can be observed by counting the indicators. If the power is turned off during use, please use the supplied charging cable to charge the product.

100%

Battery level is full: the screen displays " " (as the machine uses time, the battery power gradually decreases, and the battery icon turns off in turn;)

100% 60% 30%

0%

Low battery: the screen displays " " while the battery icon flashes, followed by the machine shutting down.

Battery charging: The screen battery icon flashes in increments until it is fully charged, the screen displays " ", and stops flashing.

Recommend using 5V ⎓ 2.4A charger.

（Tip:This product does not contain adapters）

1. Put the air duster on the desktop/plane,
2. Insert the USB power cable into the charging hole of the air duster,
3. Connect the other end of the power cord with the 5V⎓2A and above USB socket, such as mobile phone charger, mobile power bank, etc.

OPERATE INSTRUCTION

1.Press and hold the power button for 3 seconds, start the machine, and the speed is in first gear, the screen shows " ".

First gear

2、Press the power button again, switch to the second gear, and the screen shows " ".

Second gear

3、Press the power button for the third time to switch to third gear, and the screen shows " ".

Third gear

4.Press the power button for the fourth time, switch to standby mode, the screen shows " " icon flashing.Ifyou do not do anything in standby mode for oneminute, it willautomatically turn off.
5.Long press power button to turn it off when it is in turnonstatus.
6. Long press the light switch button, the LED light is on, and long press the LED light again to turn off.



⚠ Note: To reduce battery consumption, the light will automatically turn off when used for more than 40 minutes. In the case of too low battery value, the lamp and motor can not be used, please charge it in time.